Warranty Information

Proof of purchase will be required.

The guarantee does not cover faults or damage caused by incorrect installation and/or maintenance, ordinary wear and tear, water composition, etc.

*Please see www.methven.com for full terms and conditions of warranty

Cleaning

Your product has a high-quality finish and should be treated with care to preserve the visible surfaces. Never use abrasives or abrasive cleaning agents to clean this product clean regularly with contamination free warm water and a damp soft cloth. Do not use products containing chlorine bleach or hydrochloric acid as these can damage the product.

We have a policy of continuous improvement and reserve the right to change specifications without notice.

METHVEN UK LIMITED METHVEN EXPERIENCE CENTRE 3/3A STONE CROSS COURT YEW TREE WAY GOLBORNE WARRINGTON WA3 3JD UNITED KINGDOM

TEL: 0800 195 1602 FAX: 0844 406 8690 EMAIL: sales@uk.methven.com www.deva-uk.com www.methven.com

INST-HEAH08CP & HEAH10CP Various Colours-V2 21/03/2024

Round Slimline Overhead 200mm & 300mm Versions Installation Guide

Technical Specification



Min: 0.3 Bar

Max: 5.0 Bar

Operating Temperature:

Hot: 65°C Cold: 5°C Inlet Connections: ¹⁄2" BSP

Features:

- \cdot Rub clean nozzles
- \cdot Slimline design
- HEAH10CP 200mm diameter
- HEAH08CP 300mm diameter
- \cdot Adjustable head to angle spray direction
- \cdot Fitted with an 8lpm flow regulator to save water and energy









Please keep these instructions for future reference and request of replacement parts

General Safety Information

Please read all of the instructions before installation.

Methven recommends this product is installed by a competent person in compliance with all relevant regional regulations.

Remove all packaging and check the components for damage before starting installation.

This product **must** not be modified in any way as this will invalidate the guarantee. It is the responsibility of the installer to ensure a waterproof seal is achieved, after installation all connections must be checked for leaks.

All outlets used primarily for personal hygiene shall deliver water at a safe temperature as per regional regulations.

Installation Requirements

Before commencing installation of the new product, ensure that the system has been flushed to remove any debris, which could cause damage to the valves and invalidate the warranty.

Installation

- 1. The shower arm (NOT SUPPLIED) should first be installed and secured to the wall/ceiling in the desired location.
- 2. Connect the shower head to the shower arm thread and screw on until the head is secured in position (DO NOT OVERTIGHTEN)
- 3. Reinstate the water supply and check for any leaks.







