Warranty Information

Proof of purchase will be required.

The guarantee does not cover faults or damage caused by incorrect installation and/or maintenance, ordinary wear and tear, water composition, etc.

*Please see www.deva-uk for full terms and conditions of warranty

Cleaning

Your product has a high-quality finish and should be treated with care to preserve the visible surfaces. Never use abrasives or abrasive cleaning agents to clean this product clean regularly with contamination free warm water and a damp soft cloth. Do not use products containing chlorine bleach or hydrochloric acid as these can damage the product.

We have a policy of continuous improvement and reserve the right to change specifications without notice.

METHVEN UK LIMITED METHVEN EXPERIENCE CENTRE 3/3A STONE CROSS COURT YEW TREE WAY GOLBORNE WARRINGTON WA3 3JD UNITED KINGDOM

TEL: 0800 195 1602 FAX: 0844 406 8690 EMAIL: sales@uk.methven.com www.deva-uk.com www.methven.com

INST-WAI3BFCP-V1 10.03.2021

Wai 3 Tap Hole Bath Filler WAI3BFCP Installation Guide

Technical Specification

Working Pressure:

Min: 0.3 Bar

Max: 5.0 Bar

Operating Temperature:

Hot: 65°C Cold: 5°C Inlet Connections: ³/₄" BSP

Features:

- · Contemporary square design
- \cdot Ceramic disc handles ensure a smooth operation
- Products which are easy to use by all the family







Contents

Congratulations on your purchase of your new Methven Wai 3 Tap Hole Bath Filler. Our fitting instructions have been created with you in mind to provide you with all the information you require and, if you need any further help, please don't hesitate to contact our customer care team on 0800 195 1602.

General Safety Information 3

Line Drawing	3
Product Breakdown	4
Product Breakdown	4
Installation Requirements	6
Installation	6
Troubleshooting	7
Warranty Information	8
Cleaning	8

Troubleshooting

Symptom	Cause(s)	Resolution
No flow or low flow rate	Partially closed isolation valve	Open isolation valve
	Instantaneous water heater cycles on and	Increase water flow rate or pressure
	off as flow rate or pressure is too low	through system.
	Air lock or partial blockage in the supply	Flush through pipework to ensure
	pipework or hoses	removal of debris and any airlocks.
	Hot or cold water being drawn off	
	elsewhere causing pressure chnages or	Try not to use other water outlets when
	instantaneous boiler temperature	using the mixer
	changes.	
Water dripping from the mixer	This is normal for a short time after using	This is due to residual water tension, the
	the mixer	build up of water in the tap body.
	If water continues to drip, possible issue	Please contact our customer care team.
	with the flow control cartridge.	Please contact our customer care team.
Mixer does	Closed isolation valve	Open isolation valve
not turn on	Mains water supply turned off	Turn on mains water supply

Installation Requirements

Before commencing installation of the new product, ensure that the system has been flushed to remove any debris, which could cause damage to the valves and invalidate the warranty.

Installation

Drill three holes on the bath as per the drawing if required.

Install the Spout

- 1. Remove the tee connector (24), nut (27), Fixing Kit (11,12 & 13) from spout tail.
- 2. Then place the spout inlet connector (21) through the middle bath hole with the base plate (19) under spout.
- 3. Slide the Fixing Kit (11,12 & 13) over the inlet connector (21) and tighten with screw driver.

 
Install hot/cold control valve

Hot to be installed on the Left of the Spout Cold to be installed to the Right of the Spout.

- 4. Fitting the Hot Control Valve first on the left of the spout.
- 5. Remove Handle, Stem and Base Plate (1,2, 3, 7 & 8) from Valve Body (14).
- 6. Place the Valve Body (14) through the 1st hole in the bath from the underneath.
- 7. Replace the Handle (1,2 & 3) back on the Valve Body (14) Tighten the handle with allen key.
- 8. Slide the Fixing kit over its tail and tighten with screw driver. Hole 1 should now be installed as per image



- 9. Follow the same way to fit the cold control valve.
- 10. Connect the tee connector and the hot/cold control valves using braided hoses.
- 11. Adjust all parts in their position and then tighten all connections.
- 12. Connect water supplies and the hot/cold control valve. Check for any leaks.



Please keep these instructions for future reference and request of replacement parts

General Safety Information

Please read all of the instructions before installation.


Methven recommends this product is installed by a competent person in compliance with all relevant regional regulations.

Remove all packaging and check the components for damage before starting installation.

This product **must** not be modified in any way as this will invalidate the guarantee. It is the responsibility of the installer to ensure a waterproof seal is achieved, after installation all connections must be checked for leaks.

All outlets used primarily for personal hygiene shall deliver water at a safe temperature as per regional regulations.

Line Drawing

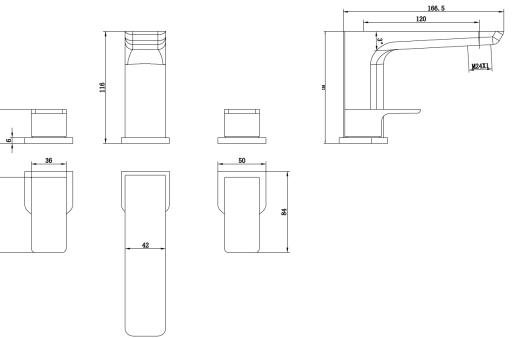

Product Breakdown

Check All components are present prior to starting installation.

Item	Description
1	Indice
2	Pointed Screw
2 3 4 5 6 7 8	Handle
4	Plastic Core
5	Cross Screw
6	Hot Cartridge
7	Stem
	Base Plate
9	Washer
10	Washer
11	Fixing Part
12	Fixing Nut
13	Cross Screw
14	Valve Body
15	O-Ring
16	Inlet Pipe
17	Spout
18	Flat Screw
19	Spout
20	O-Ring
21	Inlet Connector
22	Brass Ring
23	O-Ring
24	Valve Body
25	O-Ring
26	Outlet Connector
27	Fixing nut
28	Flexi Tails
29	Cold Cartridge
30	Aerator

