

## Warranty Information

Proof of purchase will be required.

The guarantee does not cover faults or damage caused by incorrect installation and/or maintenance, ordinary wear and tear, water composition, etc.

\*Please see [www.deva-uk](http://www.deva-uk) for full terms and conditions of warranty

## Cleaning

Your product has a high-quality finish and should be treated with care to preserve the visible surfaces. Never use abrasives or abrasive cleaning agents to clean this product clean regularly with contamination free warm water and a damp soft cloth. Do not use products containing chlorine bleach or hydrochloric acid as these can damage the product.

We have a policy of continuous improvement and reserve the right to change specifications without notice.

METHVEN UK LIMITED

METHVEN EXPERIENCE CENTRE  
3/3A STONE CROSS COURT

YEW TREE WAY  
GOLBORNE  
WARRINGTON  
WA3 3JD  
UNITED KINGDOM

INST- WAIWMBBB, WAIWMBBK,  
WAIWMBBN & WAIWMBGM-V1  
08.03.2021

TEL: 0800 195 1602  
FAX: 0844 406 8690  
EMAIL: [sales@uk.methven.com](mailto:sales@uk.methven.com)  
[www.deva-uk.com](http://www.deva-uk.com)  
[www.methven.com](http://www.methven.com)

# Wai Wall Mounted Basin Mixer

## WAIWMBBB, WAIWMBBK, WAIWMBBN & WAIWMBGM

### Installation Guide

---

#### Technical Specification

##### Working Pressure:

Min: 0.3 Bar

Max: 5.0 Bar

##### Operating Temperature:

Hot: 65°C

Cold: 5°C

##### Inlet Connections:

½" BSP

##### Features:

- On trend finishes for a designer look
- Contemporary square design
- Ceramic Cartridge For Smooth Operation
- Fitted with a 4 l/min flow regulator
- Slim stream aerator with directional swivel
- Products Which Are Easy To Use By All The Family



- Chrome
- Matte Black
- PVD Brushed Brass
- PVD Gunmetal
- PVD Brushed Nickel



**METHVEN**  
[www.methven.com](http://www.methven.com) EST 1886

## Contents

Congratulations on your purchase of your New Methven Wall Mounted Basin Mixer. Our fitting instructions have been created with you in mind to provide you with all the information you require and, if you need any further help, please don't hesitate to contact our customer care team on 0800 195 1602.

General Safety Information 3

Line Drawing 3

Product Breakdown 4

Product Breakdown 4

Installation Requirements 6

Installation 6

Troubleshooting 7

Warranty Information 8

Cleaning 8

## Troubleshooting

Symptom	Cause(s)	Resolution
No flow or low flow rate	Partially closed isolation valve	Open isolation valve
	Instantaneous water heater cycles on and off as flow rate or pressure is too low	Increase water flow rate or pressure through system.
	Air lock or partial blockage in the supply pipework or hoses	Flush through pipework to ensure removal of debris and any airlocks.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Try not to use other water outlets when using the mixer
Water dripping from the mixer	This is normal for a short time after using the mixer	This is due to residual water tension, the build up of water in the tap body.
	If water continues to drip, possible issue with the flow control cartridge.	Please contact our customer care team.
Mixer does not turn on	Closed isolation valve	Open isolation valve
	Mains water supply turned off	Turn on mains water supply

## Installation Requirements

Before commencing installation of the new product, ensure that the system has been flushed to remove any debris, which could cause damage to the valves and invalidate the warranty.

### Installation

**Body kit:** Fit mixer body assembly onto a suitable mounting plate in the wall and secure using screws through the holes in its base.

When facing the mixer, the connections should be as follows:


Hot water inlet connection 'H' below mixer cartridge.

Cold water inlet connection 'C' to the right of mixer cartridge.

Check all connections for leaks and the tap for correct operation.

Mixer body must be installed square to wall/tile face and horizontal to ensure cover plate aligns with finished tile joints.

\* To avoid damaging the decorative finish, do not remove the plastic protective caps until installation has been completed.

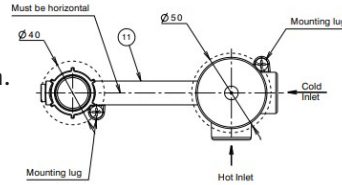

**Trim Kit:** Place self adhesive foam seal to the perimeter of the back of the faceplate.

Carefully slide the Face Plate over the mixer body.

Push the Face Plate firmly against the wall/tile face

**Fit handle:** Taking care that it is pushed fully onto cartridge stem, then tighten grub screw (3) using the 2.5mm allen key. Fit cap (2), taking care not to damage the decorative finish.

**Fit Outlet:** Carefully slide the outlet (17) onto the spigot of adapter (13) until the back of the outlet touches the faceplate (7) and top face of the outlet is horizontal as shown (in line drawing) then tighten grub screw (18) using allen key.

**DO NOT OVERTIGHTEN.**

Turn on Hot and Cold water supplies and check operation

### Removing Aerator Insert:

Aerator insert (20) can be removed with spanner.

Deposits of lime can be removed by washing in a vinegar solution.

When replacing aerator insert (20), be careful that thread is engaged correctly and 'O'ring is not damaged as it enters the bore. Tighten securely (to prevent removal by hand) using spanner.

Please keep these instructions for future reference and request of replacement parts

## General Safety Information

Please read all of the instructions before installation.

Methven recommends this product is installed by a competent person in compliance with all relevant regional regulations.


Remove all packaging and check the components for damage before starting installation.

This product **must** not be modified in any way as this will invalidate the guarantee.

It is the responsibility of the installer to ensure a waterproof seal is achieved, after installation all connections must be checked for leaks.

All outlets used primarily for personal hygiene shall deliver water at a safe temperature as per regional regulations.

## Line Drawing

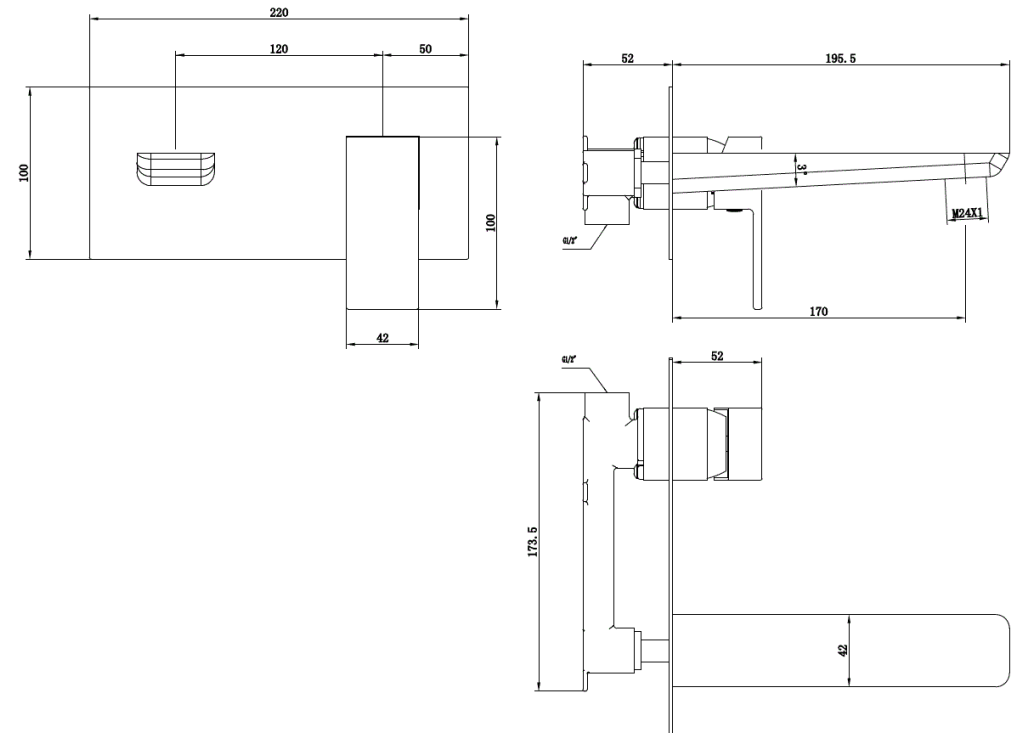

## Product Breakdown

Check All components are present prior to starting installation.

1	Handle
2	Cap
3	Flat Screw
4	Cartridge Shroud
5	Cartridge Nut
6	Flat Base Cartridge
7	Face Plate
8	Cartridge Cover
9	Tap Body
10	Cross Screw
11	WallPlugs
12	Screws
13	O-Ring
14	Outlet Connector
15	O-Ring
16	Flat Screw
17	Spout
18	Pointed Screw
19	Protector Cap
20	Aerator

