Warranty Information

Proof of purchase will be required.

The guarantee does not cover faults or damage caused by incorrect installation and/or maintenance, ordinary wear and tear, water composition, etc.

*Please see www.methven.com for full terms and conditions of warranty

Cleaning

Your product has a high-quality finish and should be treated with care to preserve the visible surfaces. Never use abrasives or abrasive cleaning agents to clean this product clean regularly with contamination free warm water and a damp soft cloth. Do not use products containing chlorine bleach or hydrochloric acid as these can damage the product.

We have a policy of continuous improvement and reserve the right to change specifications without notice.

METHVEN UK LIMITED METHVEN EXPERIENCE CENTRE 3/3A STONE CROSS COURT YEW TREE WAY GOLBORNE WARRINGTON WA3 3JD UNITED KINGDOM

WST13Cp, WST13BB, WST13BK, WST13BN, WST13GM TEL: 0800 195 1602 FAX: 0844 406 8690 EMAIL: sales@uk.methven.com www.deva-uk.com www.methven.com

Free Flow 1 1/4" Unslotted Waste

WST13CP, WST13BB, WST13BK, WST13BN, WST13GM Installation Guide

Technical Specification Operating Pressure Min: N/A Max: N/A Operating Temperature Hot: N/A Cold: N/A Inlet Connections: 1 1/4" BSP

Features:

- Allows water to flow continuously, reducing the risk of flooding
- For basins without an overflow
- WST13CP Chrome Finish







Please keep these instructions for future reference and request of replacement parts.

General Safety Information

Please read all of the instructions before installation.

Methven recommends this product is installed by a competent person in compliance with all relevant regional regulations. Remove all packaging and check the components for damage before starting installation.

This product must not be modified in any way as this will invalidate the guarantee. It is the responsibility of the installer to ensure a waterproof seal is achieved, after installation all connections must be checked for leaks.

This waste is designed to "never close" - it covers the hole only and allows water to continuously flow down the drain.

Installation Instructions

1) Place the basin waste into the basin and through the hole, to connect underneath.

2) Sealant must be applied to the underside of the waste flange to seal between the waste and basin.

3) Once fitted, on the underside of the basin feed the rubber seal flange washer up the tail for the waste. Again sealant can be used to seal between the washer and the basin.

4) Feed the smaller backnut washer onto the bottom of the waste tail and using the locking backnut, tighten until the waste is secure. As above sealant can also be used.

5) Attach the trap/waste pipework to the bottom of the waste body and test for leaks.

Diagram



No.	Description
1.	Cover
2.	Waste Body
3.	2 x Washers
4.	Backnut



