

## Warranty Information

Proof of purchase will be required.

The guarantee does not cover faults or damage caused by incorrect installation and/or maintenance, ordinary wear and tear, water composition, etc.

\*Please see [www.deva-uk](http://www.deva-uk) for full terms and conditions of warranty

## Cleaning

Your product has a high-quality finish and should be treated with care to preserve the visible surfaces. Never use abrasives or abrasive cleaning agents to clean this product clean regularly with contamination free warm water and a damp soft cloth. Do not use products containing chlorine bleach or hydrochloric acid as these can damage the product.

We have a policy of continuous improvement and reserve the right to change specifications without notice.

METHVEN UK LIMITED  
METHVEN EXPERIENCE CENTRE  
3/3A STONE CROSS COURT  
YEW TREE WAY  
GOLBORNE  
WARRINGTON  
WA3 3JD  
UNITED KINGDOM

TEL: 0800 195 1602  
FAX: 0844 406 8690  
EMAIL: [sales@uk.methven.com](mailto:sales@uk.methven.com)  
[www.deva-uk.com](http://www.deva-uk.com)  
[www.methven.com](http://www.methven.com)

INST-  
WAI4BSMBK, WAI4BSMBB, WAI4BSMBN  
& WAI4BSMGM - V1 10.03.2021

# Wai 4 Hole Deck Bath Shower Mixer

## WAI4BSMBK, WAI4BSMBB, WAI4BSMBN & WAI4BSMGM Installation Guide

### Technical Specification

#### Working Pressure:

Min: 0.3 Bar

Max: 5.0 Bar

#### Operating Temperature:

Hot: 65°C

Cold: 5°C

#### Inlet Connections:

3/4" BSP

#### Features:

- On trend finish for a designer look
- Contemporary square design
- Complete with Waipori Satinjet handset regulated to 8 l/minute
- Water efficient without compromising showering performance
- Ceramic disc handles ensure a smooth operation
- Products which are easy to use by all the family



- Chrome
- Matte Black
- PVD Brushed Brass
- PVD Gunmetal
- PVD Brushed Nickel



**METHVEN**  
[www.methven.com](http://www.methven.com) EST 1886

## Contents

Congratulations on your purchase of your new Methven Wai 4 Hole Deck Bath Shower Mixer Chrome. Our fitting instructions have been created with you in mind to provide you with all the information you require and, if you need any further help, please don't hesitate to contact our customer care team on 0800 195 1602.

General Safety Information 3

Line Drawing 3

Product Breakdown 4

Product Breakdown 4

Installation Requirements 6

Installation 6

Troubleshooting 7

Warranty Information 8

Cleaning 8

## Troubleshooting

| Symptom                       | Cause(s)  | Resolution  |
|-------------------------------|---|---|
| No flow or low flow rate      | Partially closed isolation valve  | Open isolation valve  |
|                               | Instantaneous water heater cycles on and off as flow rate or pressure is too low                                  | Increase water flow rate or pressure through system.                          |
|                               | Air lock or partial blockage in the supply pipework or hoses  | Flush through pipework to ensure removal of debris and any airlocks.          |
|                               | Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes. | Try not to use other water outlets when using the mixer                       |
| Water dripping from the mixer | This is normal for a short time after using the mixer   | This is due to residual water tension, the build up of water in the tap body. |
|                               | If water continues to drip, possible issue with the flow control cartridge.                                       | Please contact our customer care team.  |
| Mixer does not turn on        | Closed isolation valve  | Open isolation valve  |
|                               | Mains water supply turned off   | Turn on mains water supply  |

## Installation Requirements


Before commencing installation of the new product, ensure that the system has been flushed to remove any debris, which could cause damage to the valves and invalidate the warranty.

### Installation

Drill four holes on the bath as per the drawing if required.

#### Install the Spout


1. Remove the tee connector (31), nut (34), Fixing Kit (11,12 & 13) from spout tail.
2. Then place the spout inlet connector (21) through the second from left bath hole with the base plate (19) under spout.
3. Slide the Fixing Kit (11,12 & 13) over the inlet connector (21) and tighten with screw driver.

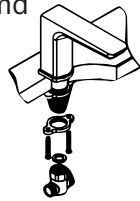

#### Install hot/cold control valve

Hot to be installed on the Left of the Spout Cold to be installed to the Right of the Spout.

4. Fitting the Hot Control Valve first on the left of the spout.
5. Remove Handle, Stem and Base Plate (1,2, 3, 7 & 8) from Valve Body (14).
6. Place the Valve Body (14) through the 1st hole in the bath from the underneath.
7. Replace the Handle (1,2 & 3) back on the Valve Body (14) - Tighten the handle with allen key.
8. Slide the Fixing kit over its tail and tighten with screw driver.  
Hole 1 should now be installed as per image



9. Follow the same way to fit the cold control valve.
10. Connect the tee connector and the hot/cold control valves using braided hoses.
11. Put the tail for the handset holder through the 4th hole, tighten with the backnut.
12. Adjust all parts in their position and then tighten all connections.
13. Connect the shower hose from the connection under the spout through the handset holder in hole 4.
14. Connect the handset to the Shower hose.
15. Connect water supplies and the hot/cold control valve. Check for any leaks.

Please keep these instructions for future reference and request of replacement parts

## General Safety Information

Please read all of the instructions before installation.

Methven recommends this product is installed by a competent person in compliance with all relevant regional regulations.


Remove all packaging and check the components for damage before starting installation.

This product **must** not be modified in any way as this will invalidate the guarantee.

It is the responsibility of the installer to ensure a waterproof seal is achieved, after installation all connections must be checked for leaks.

All outlets used primarily for personal hygiene shall deliver water at a safe temperature as per regional regulations.

### Line Drawing

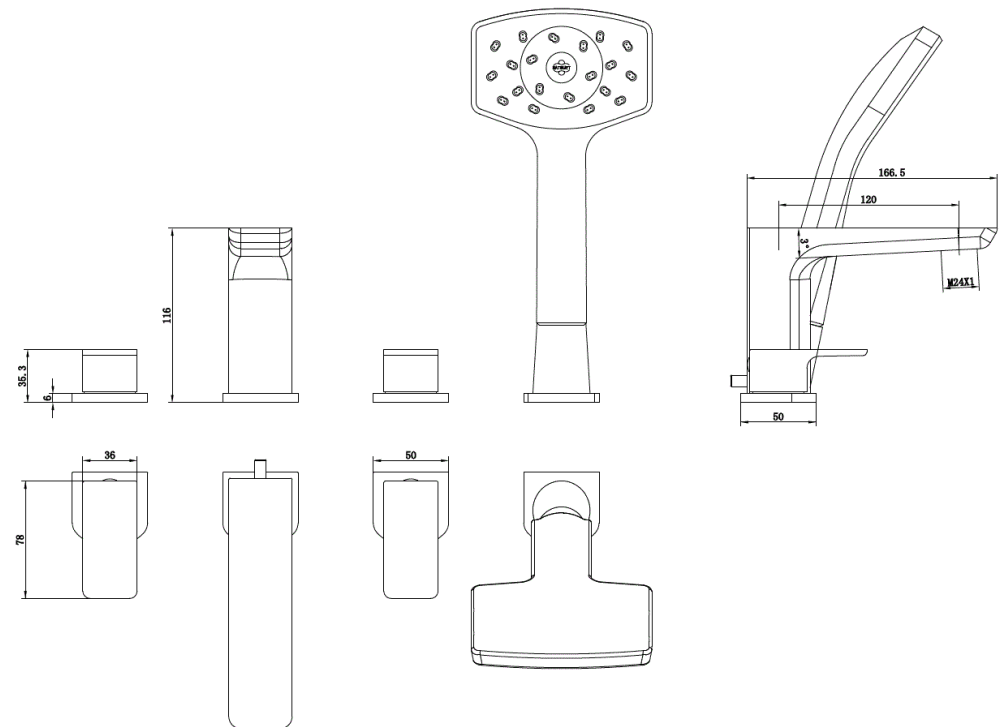

## Product Breakdown

Check All components are present prior to starting installation.

| Item | Description           |
|------|-----------------------|
| 1    | Indice                |
| 2    | Pointed Screw         |
| 3    | Handle                |
| 4    | Plastic Core          |
| 5    | Cross Screw           |
| 6    | Hot Cartridge         |
| 7    | Stem                  |
| 8    | Base Plate            |
| 9    | Washer                |
| 10   | Washer                |
| 11   | Fixing Part           |
| 12   | Fixing Nut            |
| 13   | Cross Screw           |
| 14   | Valve Body            |
| 15   | O-Ring                |
| 16   | Inlet Pipe            |
| 17   | Connector             |
| 18   | Pointed Screw         |
| 19   | Spout                 |
| 20   | Flat Screw            |
| 21   | Base Plate            |
| 22   | O-Ring                |
| 23   | Inlet Connector       |
| 24   | Diverter Spring       |
| 25   | O-Ring                |
| 26   | Diverter              |
| 27   | O-Ring                |
| 28   | Divertor Core         |
| 29   | Vbrass Ring           |
| 30   | O-Ring                |
| 31   | Valve Body            |
| 32   | O-Ring                |
| 33   | Outlet Connector      |
| 34   | Fixing nut            |
| 35   | Flexi Tails           |
| 36   | Cold Cartridge        |
| 37   | Aerator               |
| 38   | Fixing nut            |
| 39   | Washer                |
| 40   | Shower hose           |
| 41   | Inlet Connector       |
| 42   | Shower Handset Holder |
| 43   | Shower Handset        |

