



Ceramic cartridge adjustment


Do not remove the ceramic cartridge from the body assembly while carrying out the following adjustments. Note, the cartridge is factory set for maximum temperature.

Flow limiting adjustment

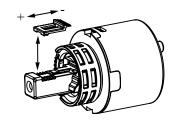

Remove half-dome (if attached)

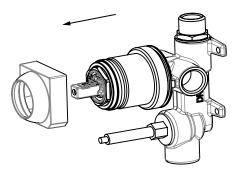

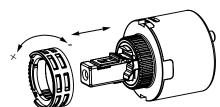

Mix temperature limiting adjustment

Methven warrants this product against manufacturing defects and that it is suitable for use under the operating conditions specified in this instruction sheet.

For your warranty please refer to www.methven.com or call Customer Service

New Zealand 0800 804 222 Australia 1300 638 483 UK 0800 195 1602

KIRI SHOWER MIXER WITH DIVERTOR INSTALLATION GUIDE

TECHNICAL SPECIFICATIONS

Operating Pressure:Min: 150kPa, Max 500kPaRecommended installation of a pressure limiting valve if supply pressure exceeds 500kPaOperating Temperature:Recommended 50°C at the mixerHot: Max 80°CCold: Min 5°CNB: New Zealand Building Code Clause G12 - Water Supplies specifies all outlets used primarily for personalhygiene shall deliver water at a safe temperature.Inlet Connections: All ½" BSP



IMPORTANT

Please read all of the instructions before installation

Avoid restrictive piping, fitting or sharp angled bends when plumbing the mixer. The maximum working pressure of the ceramic cartridge is 500kPa. Do not hydrostatic test the installation with this mixer installed. Damage to the ceramic cartridge may occur. All pipework must be thoroughly flushed prior to installation of the mixer. Inline filters must be installed on both hot and cold supplies to prevent foreign particles damaging the ceramic cartridge.

