

Futura Satinjet Hand Shower on Wall Outlet Bracket INSTALLATION GUIDE

TECHNICAL SPECIFICATIONS

Operating Pressure:

Min 35kPa, Max 500kPa.

Recommended installation of a pressure limiting valve if supply exceeds 500kPa

Operating Temperature:


Max 70°C.

NB: New Zealand building code clause G12 - Water Supplies specifies all outlets used primarily for personal hygiene shall deliver water at a safe temperature.

Inlet connections: All 1/2" BSP

Notes:

- After installation all connections must be checked for leaks.
- All installations must be carried out in compliance with relevant water regulations.

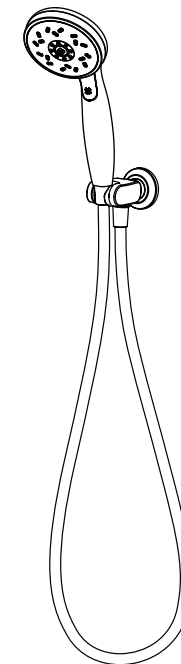


Methven warrants this product against manufacturing defects and that it is suitable for use under the operating conditions specified in this instruction sheet.

For your warranty please refer to www.methven.com or call Customer Service


New Zealand
0800 804 222

Australia
1300 638 483

UK
0800 195 1602

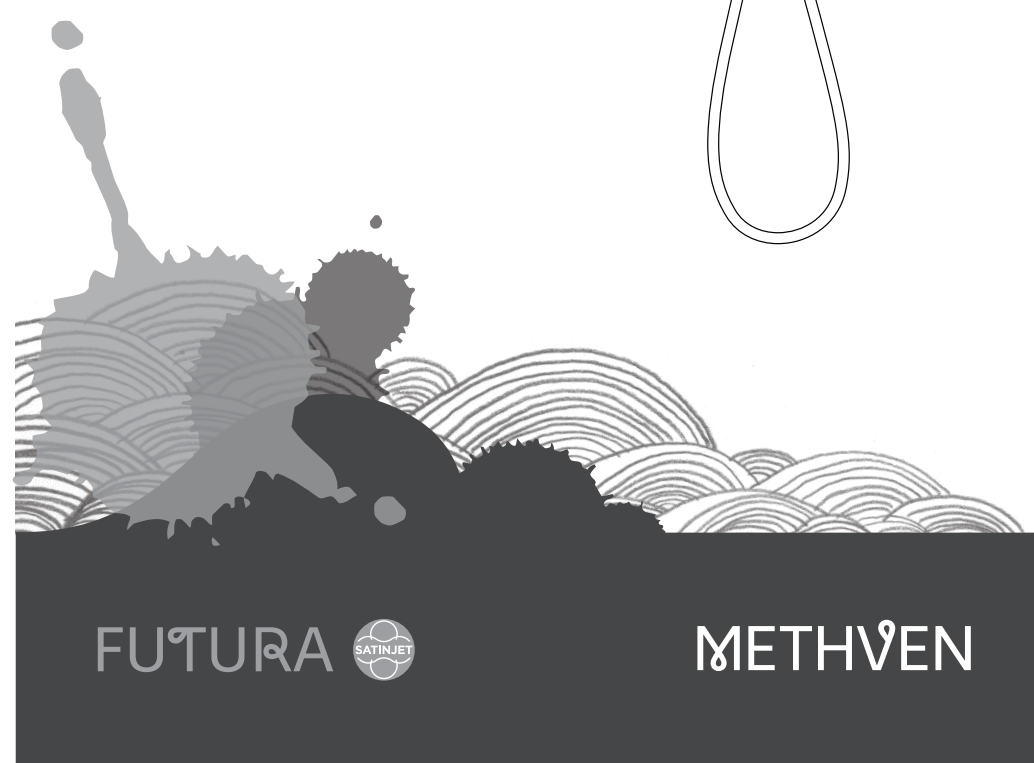


1.

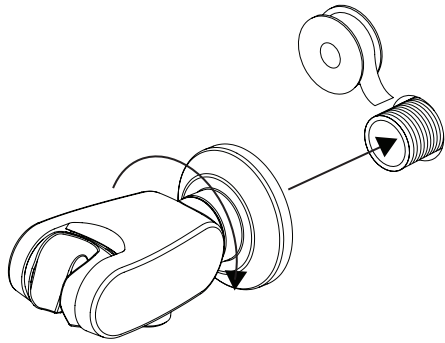

Apply plumbing tape to pipe. Screw wall outlet bracket onto 1/2" nipple pipe ensuring it ends up in the correct position.

2.

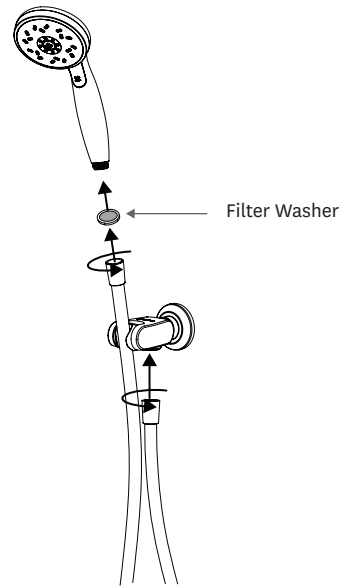

Insert the filter washer into the new hose before screwing to the handset.



CLEANING

Water contains lime which remains on the surface after the water has evaporated. These lime deposits can be prevented from forming by wiping immediately after use.

To clean the chrome-plated surfaces use a soft cloth, soap and warm water. Never use cleaning agents that contain a corrosive acid or a scouring additive.



Do not use any sharp objects to clean nozzles.

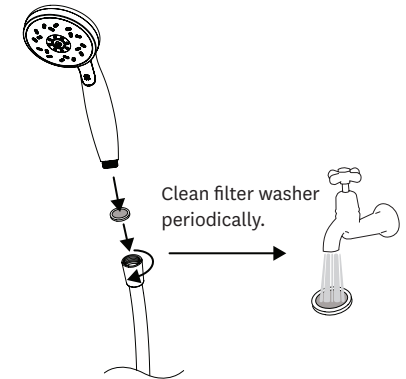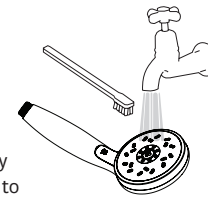

NOTE: Removal of the flow restrictor in the handset may be necessary to optimise flow performance in low or unequal pressure systems only